

HQ CAP/LGT SUGGESTED VEHICLE ROUTINE MAINTENANCE AND SCHEDULE LISTING
FOR MANUFACTURERS SCHEDULED MAINTENANCE -- REFER TO OWNERS' MANUAL
(SCHEDULED, ROUTINE MAINTENANCE, AND TOWING NOT REIMBURSABLE BY HEADQUARTERS)

<u>Maintenance</u>	<u>Interval Schedule</u>
Fluid Levels	Prior to Operation
Engine Oil Change & Filter	3,000 to 5,000 miles (6 months)
Inspect CV Joint Boots	7,500 miles
Rotate and Balance Tires	7,500 miles
Inspect Engine Coolant Condition, Coolant Hoses & Clamps, and Fan Clutch	7,500 miles
Inspect and Adjust/Replace Drive Belts	15,000 miles
Change Transmission Fluid and Replace Filter	15,000 miles
Change Spark Plugs	30,000 miles
Replace Engine Air Filter, Fuel, and PCV Filter	30,000 miles
Replace Distributor Cap and Rotor	30,000 miles
Adjust Ignition Timing	30,000 miles
Replace Serpentine Belt and Check Belt Tensioner	30,000 miles
Replace PCV Valve	60,000 miles
Test Vacuum Operated Emission Components	60,000 miles
Replace Spark Plug Wires	60,000 miles
Replace Oxygen Sensor	82,000 miles
Check and Service Engine Cooling System	12 months
Inspect Exhaust System	12 months
Inspect Brake Linings and Hoses	12 months
Inspect Wheel Bearings	12 months
Air Conditioning Service and Inspection	12 months
Flush and Replace Engine Coolant	36 months (24 months thereafter)
Lube Chassis System	At oil change
Towing	As Required